

Type:

Model:

### JADE LED Bollard

**ORDERING CODE:**

- 600202 39" Direct Burial 12V      600620 39" Surface Mount 12V
- 600540 39" Direct Burial 120V    600621 39" Surface Mount 120V
- 600594 48" Direct Burial 12V      600622 48" Surface Mount 12V
- 600595 48" Direct Burial 120V    600623 48" Surface Mount 120V

**SPECIFICATIONS**

**HOUSING:** Marine-grade (5052) aluminum.

**STANDARD POWDER COAT COLORS:** PPG PCT23104 Vintage Bronze Texture is standard. Available in additional colors per the chart below. Other custom colors are also available.

**LAMP:** Integrated LED module 2W - 12W (adjustable)

**MOUNTING OPTIONS:** Surface mount or direct burial.

**WIRING:** Prewired with 5-foot lead.

**WARRANTY:** Ten years.


**MANUAL ADJUSTING POWER:**

POWER	LUMENS	EFFICACY
2W	200lm	100 lm/W
4W	400lm	100 lm/W
6W	580lm	97 lm/W
9W	800lm	88 lm/W
12W	950lm	80 lm/W




Aluminum bollard features an integrated manually adjustable 2W - 12W light source, available in 12V or 120V models.

**DIMENSIONS:**

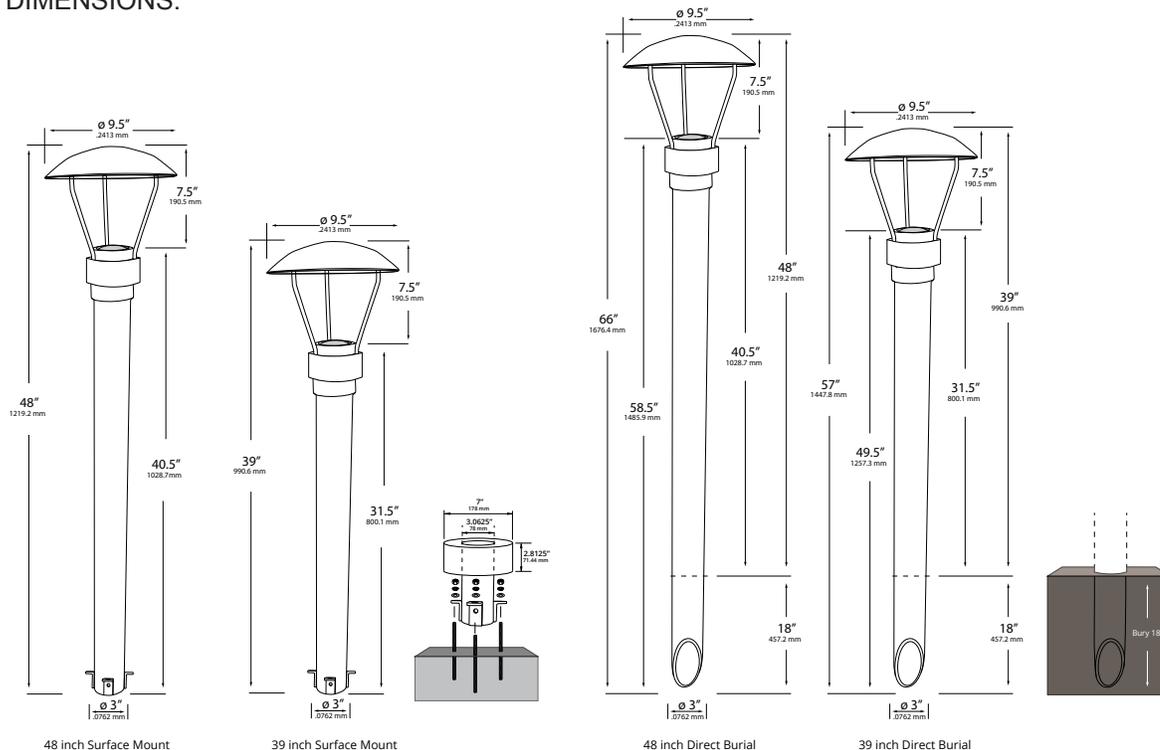

Cardinal C291-GN20 Patina Texture Semi Gloss	
Cardinal T091-GN57 Verdigris Texture Semi Gloss	
Cardinal T013-RD15 Red Hammer Semi Gloss	
Tiger Drylac 39/40002 Sapphire Hammer	
TCI Powders 9016-8336 Burst Rust	
Tiger Drylac 38/60080 Statuary Bronze	
Tiger Drylac 49/92910 Silver Matte	
Tiger Drylac 39/81420 Jet Black Hammer	
TCI Powders 9030-90922 SD Flat Black	
Powder Buy the Pound SK4331 Fine Textured Black	
Cardinal T012-WH260 White Hammer Semi Gloss	
PPG PCT23104 Vintage Bronze Texture	
Primastic PVB-8109 Jade/Copper	
Cardinal T064-BL95 Blue Hammer Semi Gloss	

## Surface Mount Installation

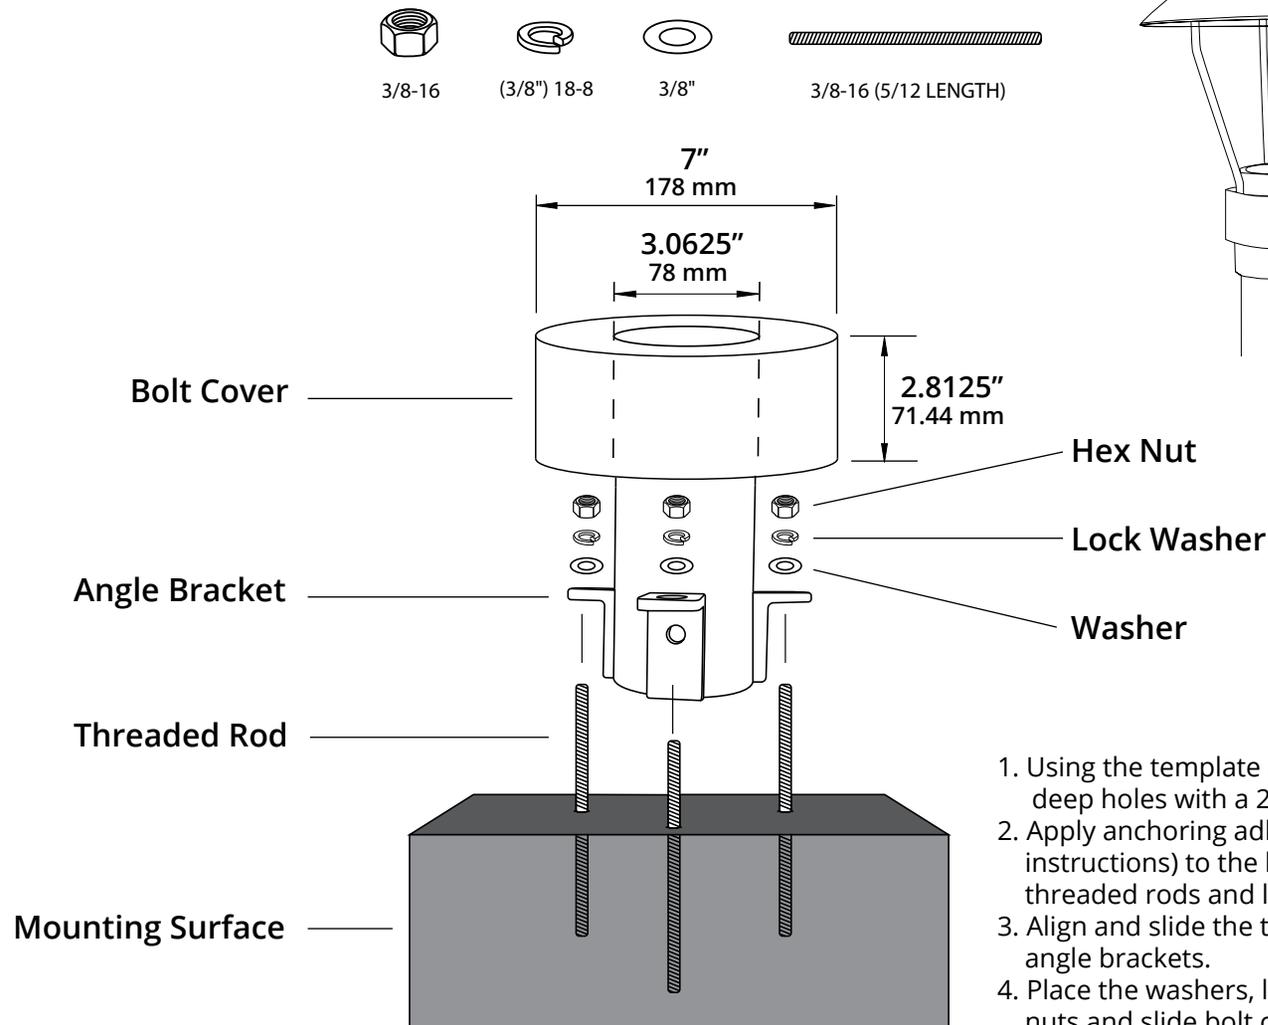

**PLEASE NOTE:** leave at least 12" of slack on the power cable for easy access and replacing of the light module.

1. Using the template provided, drill 3 inch deep holes with a 25/64-in masonry drill bit.
2. Apply anchoring adhesive (following adhesive instructions) to the holes created, insert the threaded rods and let them set.
3. Align and slide the threaded rods through the angle brackets.
4. Place the washers, lock washers, tighten hex nuts and slide bolt cover down.